

How do I link a part to a category?

1. Right-click on a part and select **Edit...**
2. Go to the tab **Category**.
3. Select the category where the article should be displayed.
4. Click on **Save & close**.

Part details associated with location Mastex Trader

General details

Supplier

Comments

Category

Documents

Stock from other locations

Crewing

▶ ☐ 100 Superstructure

▼ ☒ 200 Engines & propulsion

▼ ☒ 210 Main engines

☒ 210.1 Main Engine PS

☒ 210.2 Main Engine SB

▶ ☐ 211 Reduction Gear

☐ 214 Propeller Shaft & Bearings

☐ 214.1 Propeller shaft installation PS

☐ 214.2 Propeller shaft installation SB

☐ 221 Rudder

☒ 221.1 Rudder PS

☒ 221.2 Rudder SB

☒ 222 Steering gear

☐ 223 Bow Thruster Installation

☐ 223.1 Bow Thruster Engine

Save

Save & close

Close

If a part is created while a category is selected, the article will be linked to the selected category.

Revision #2

Created 8 November 2024 15:11:37 by Peter van Driel

Updated 8 November 2024 15:13:20 by Peter van Driel