


# How do I create a new running hours machine?

1. Click on **Counters**.
2. Click on **New...**
3. Fill in the details for the sub-counter.
4. Under **Parent**, select the parent-counter for the sub-counter.

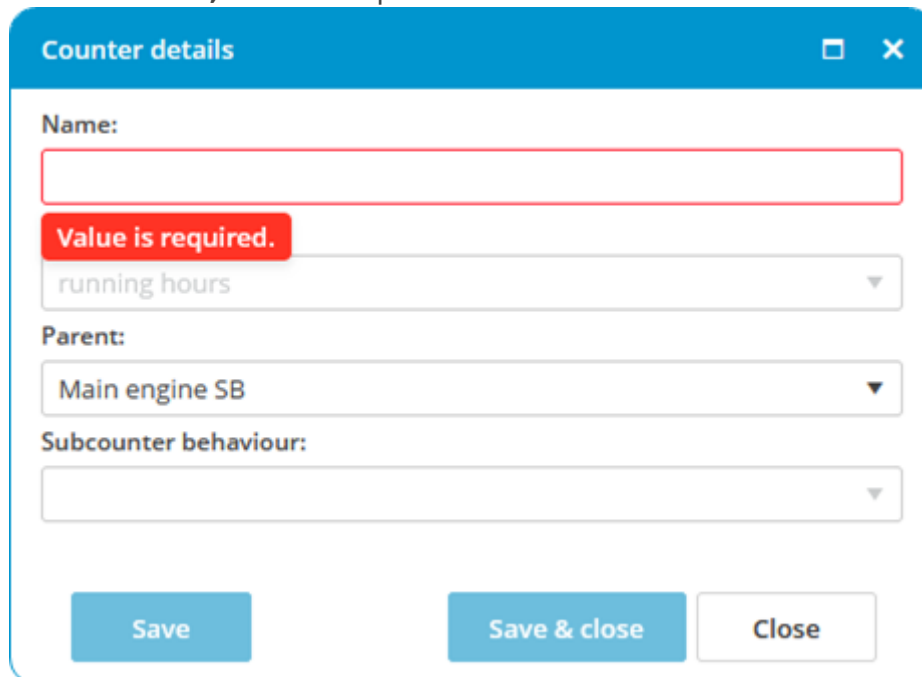

The screenshot shows a 'Counter details' dialog box. It has a blue header with the title 'Counter details' and window control icons. The form contains the following fields:

- Name:** A text input field that is empty and has a red border, indicating a validation error. A red tooltip message 'Value is required.' is displayed below it.
- Value:** A dropdown menu currently showing 'running hours'.
- Parent:** A dropdown menu currently showing 'Main engine SB'.
- Subcounter behaviour:** An empty dropdown menu.

At the bottom of the dialog, there are three buttons: 'Save' (blue), 'Save & close' (blue), and 'Close' (white with a blue border).

5. Click on **Save & close**.

**Sub-counter behavior:** There are multiple options to change the behavior of the sub-counters of a parent-counter.

- Add delta value to sub-counters: The sub-counters will be updated by the main counter.
- Fill main counter with highest value: The main counter will be filled with the highest value from all of the sub-counters.
- Fill main counter with lowest value: The main counter will be filled with the lowest value from all of the sub-counters.
- Fill main counter with average value: The main counter will be filled with the average value from all of the sub-counters.

Revision #1

Created 8 November 2024 12:45:43 by Peter van Driel

Updated 8 November 2024 12:47:19 by Peter van Driel